


# ARTICLE.

VERSION 1.0

## Assembly Instructions

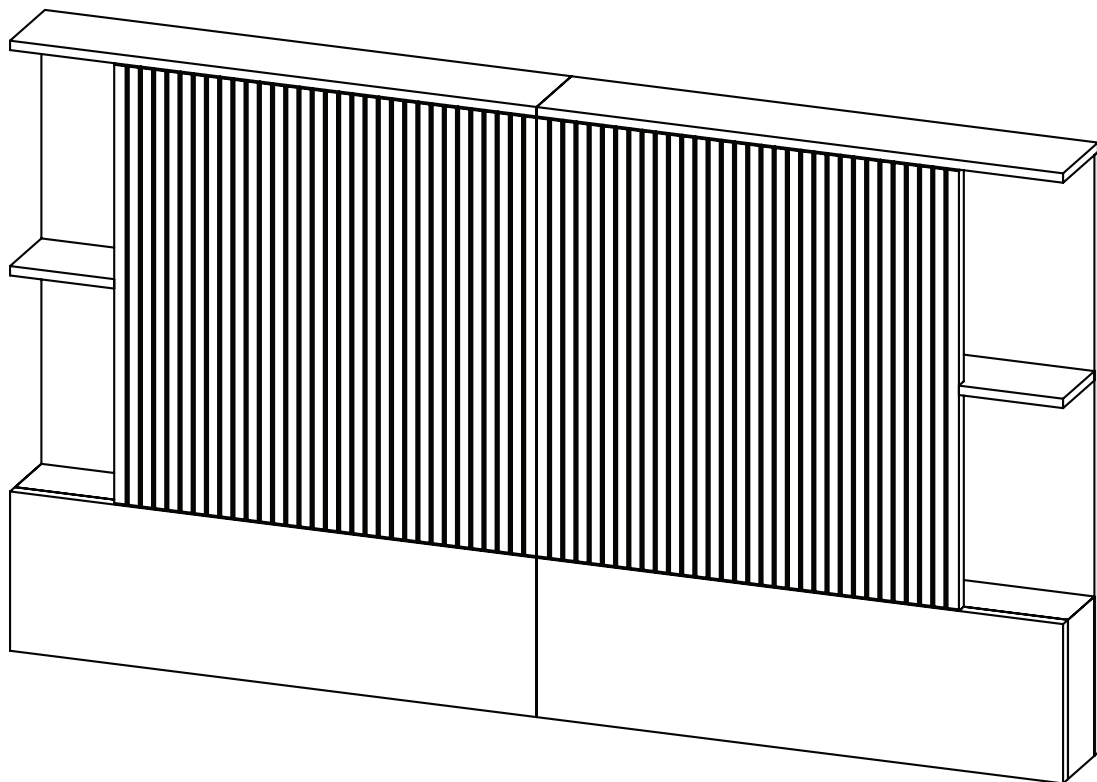

# KOUVA


Headboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

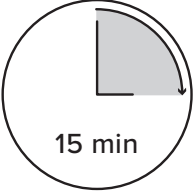


15 min

TIME

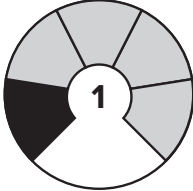


1



DIFFICULTY





# OF PEOPLE



ANTI-TIP  
Installation Required

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEFT SIDE HEADBOARD	1
B	RIGHT SIDE HEADBOARD	1
C	ALLEN KEY 	1
D	M6 × 60MM BOLT 	5

1

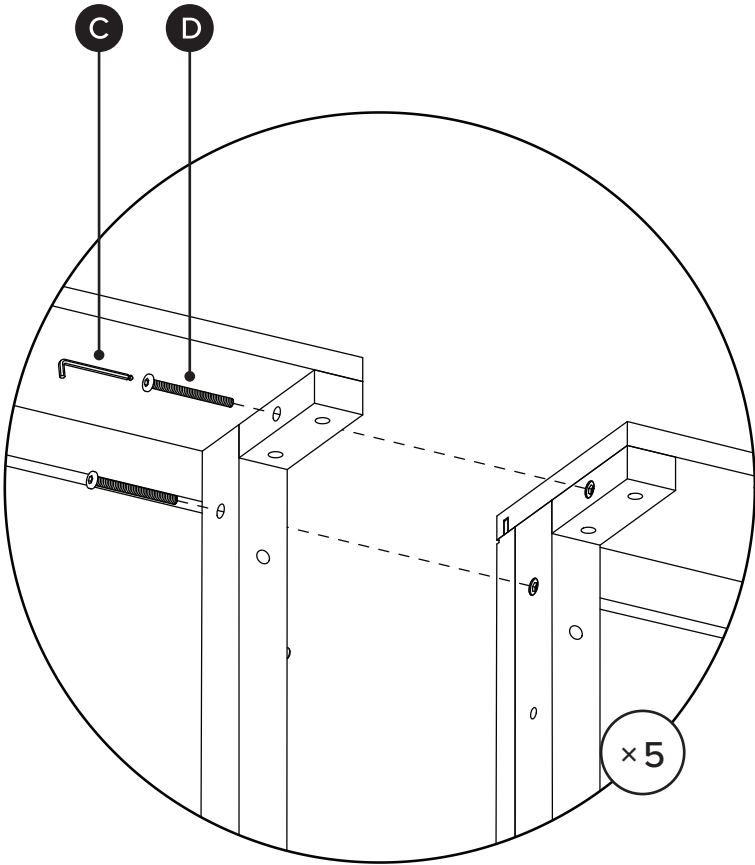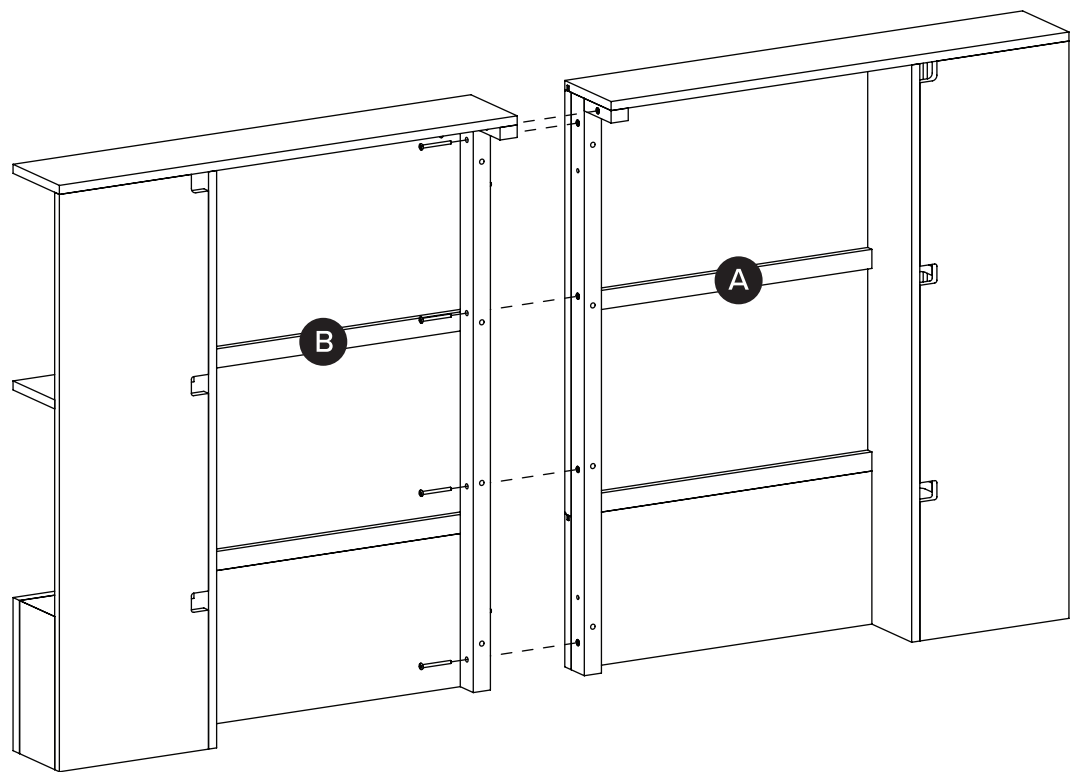



ANTI-TIP RESTRAINT INSTALLATION

**! WARNING!**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.




TIME




# OF PEOPLE

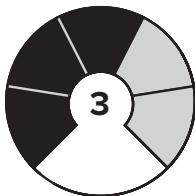






DIFFICULTY

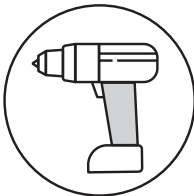

REQUIRED TOOL  
8MM / 5/16" DRILL BIT


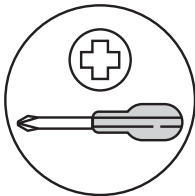


REQUIRED TOOL

ANTI-TIP KIT INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2


**!** Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

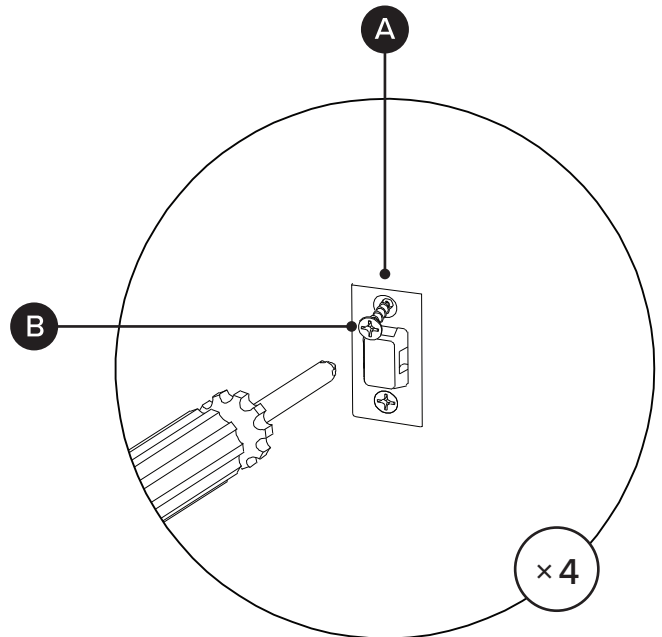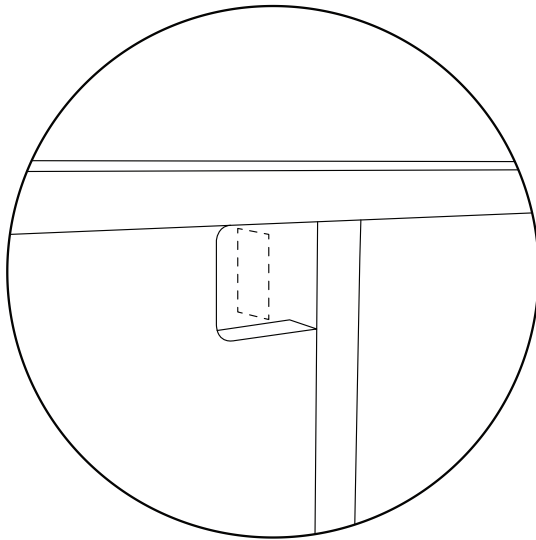


Attach bracket to each inside edge approx. 1.5" in through the holes on the back of the headboard. Note there are no existing pilot holes on the product.

2

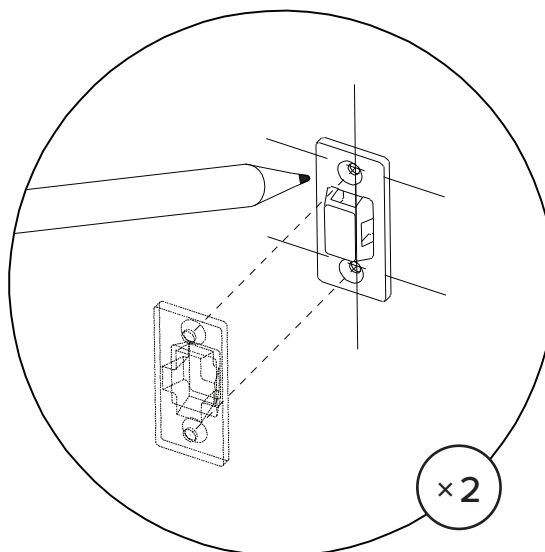

Mark on wall where second pair of brackets should be placed.


3

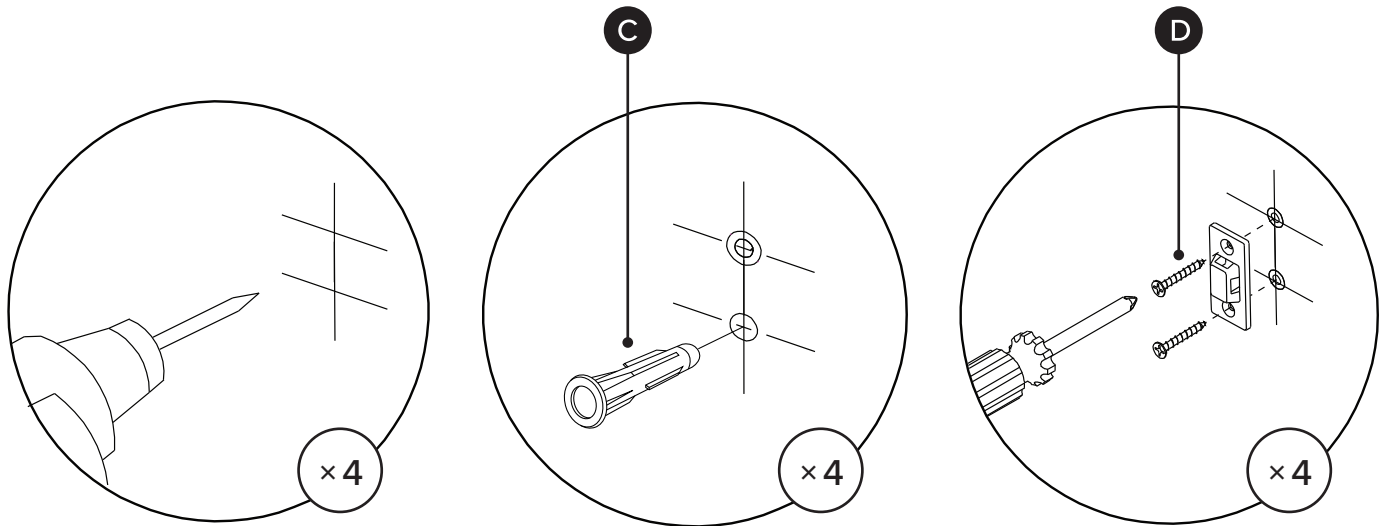


Drill holes in wall using  
8mm / 5/16" drill bit.

4A

Align brackets on unit with brackets on wall.

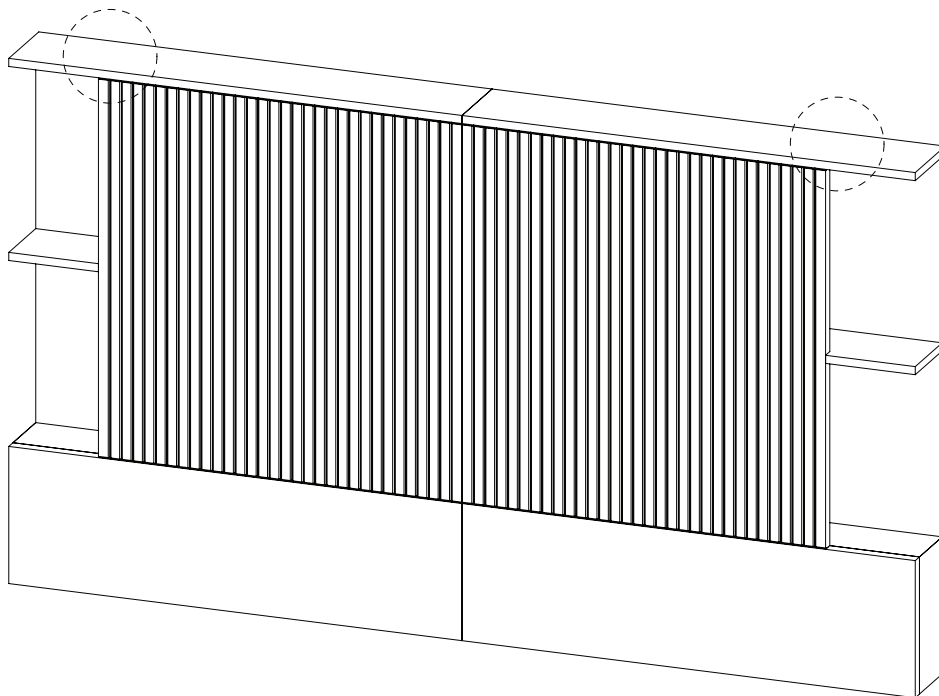

4B

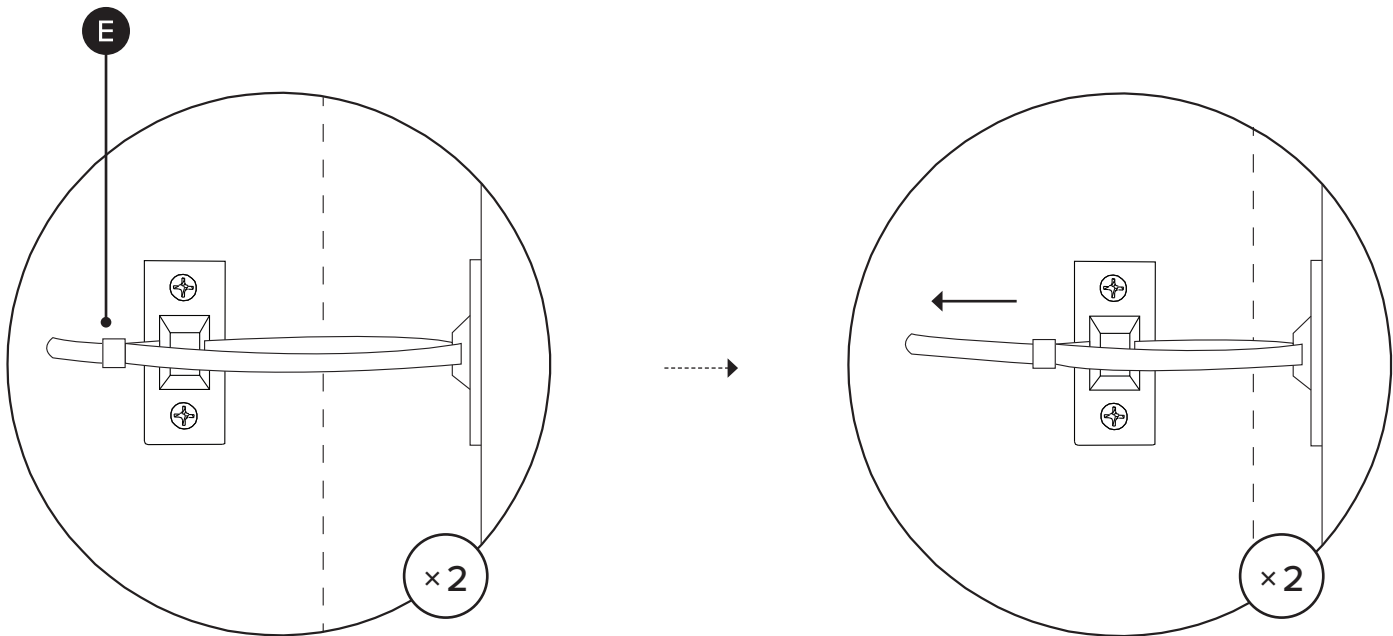

Pull strap until it snap-locks.